

SONIC SIREN REMOTE HORN

RH100

Sonic Siren Installation	
1. Plug Sonic Siren into wall outlet.	
2. Adjust volume.	
3. Adjust tone.	
Volume 2	3



The ADJUSTABLE REMOTE HORN,

"will alert you" by sounding an adjustable tone and volume control.

You select the most effective audio alert sound combination.

From a loud 78-85 decibel low frequency to a high 113 decibels.

The adjustable tone ranges from 200-2,000 Hertz. IDEAL FOR HARD OF HEARING MEMBERS OF THE FAMILY CAN BE MIXED WITH ALL SONIC ALERT REMOTES